

# Check voicemail while roaming – BlackBerry 9700



## Prerequisite

1. To access your voicemail you will first need to know your PIN and voicemail service is set up and configured on the phone.

**Note:** While roaming holding down the 1 key to access voicemail may not work.

## On the handset


1. From the main screen, press the **Call key**.




2. Dial **+64** followed by your mobile number without the leading 0 (e.g. +64270555000) and press the **Call key**.



3. Press \* when the call begins.

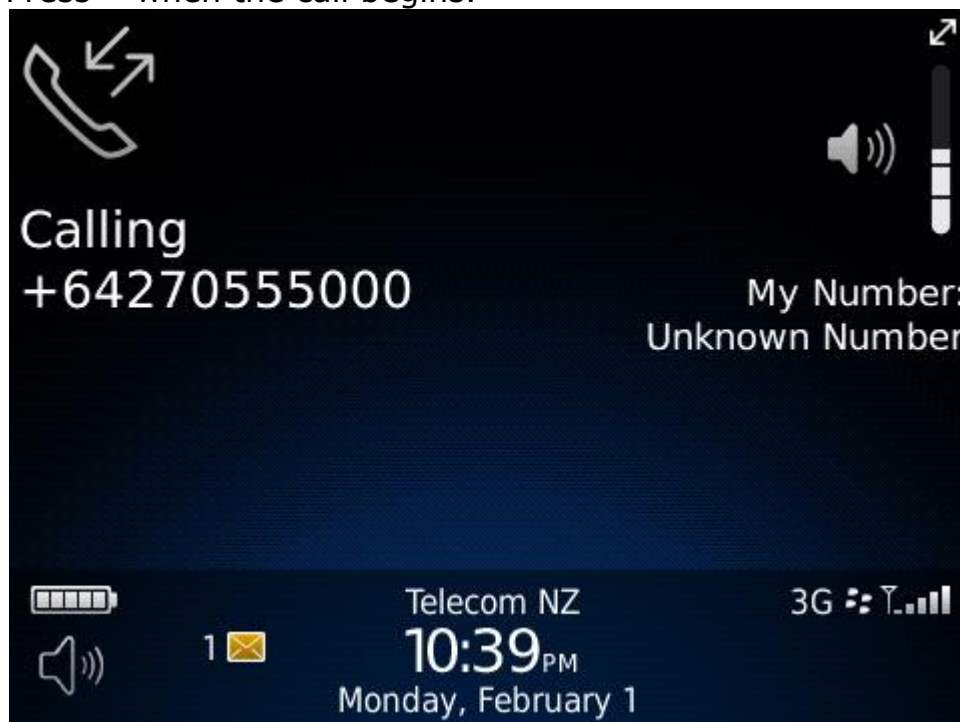

4. Enter your PIN if prompted and press **#**.

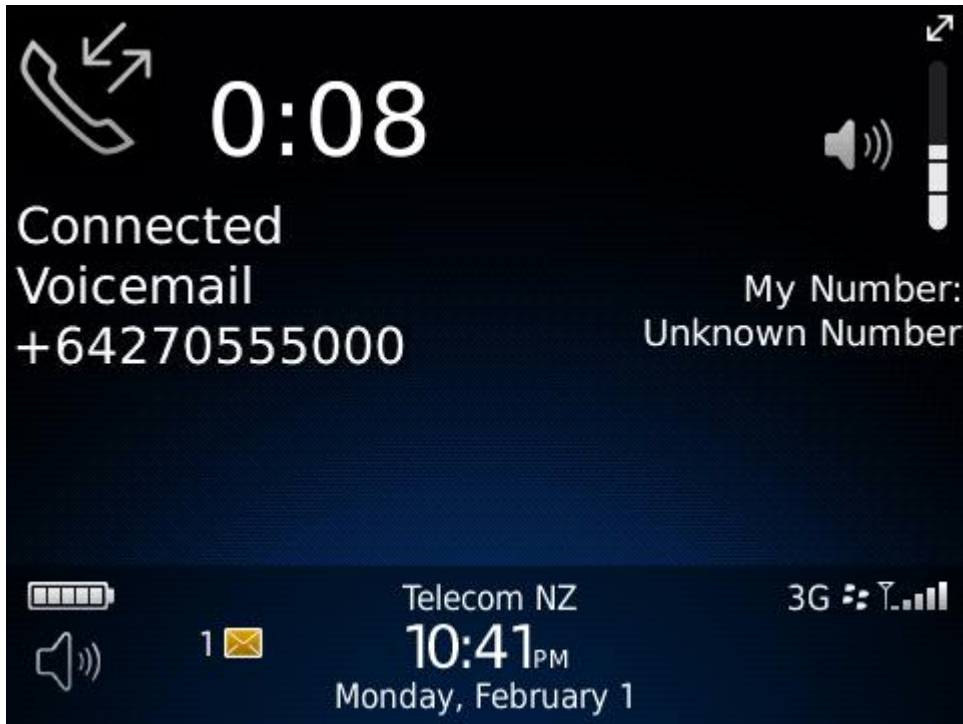

5. Listen to any new voice messages and follow the voice prompts to delete or save messages.
6. Press the **End call** key to return to the main screen.