

LG GW620f Exchange Email Setup

In preparation for configuring Email through your Company Exchange Server, you will need to acquire the **Exchange Server Address** and **Domain Name** from your IT department.

- **Menu > Moxier Mail**
- Press **Next**
- Enter **Email Address, Username** and **Password** (note: the username and password are the same as the username and password used to log onto your work PC)
- Press **Next**
- Press **OK** and enter the **Domain** and **Server Address** given to you by your IT Department
- Tick the box marked **SSL** and press **Next**
- Select what you wish to Synchronise with then **Exit**