

# Setting up the Telecom R6 for E-mail



## Prerequisite

1. Ensure your mobile phone is configured for Internet.

## Setting up the E-mail account


1. To set up email, from the main screen, press **Menu**.




2. Scroll to **Messages** and press the **Centre** key.




3. Scroll across to **Email**.

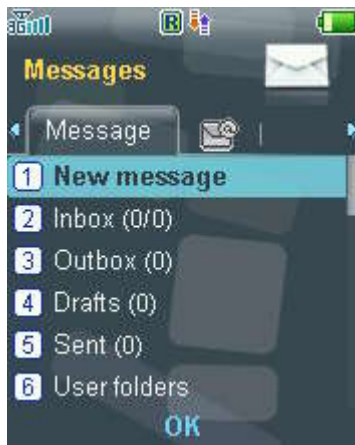

4. Scroll to **Settings** and press **OK**.

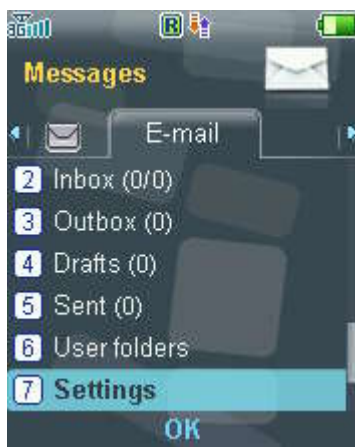

5. Scroll to **Mailbox Settings** and press **OK**.

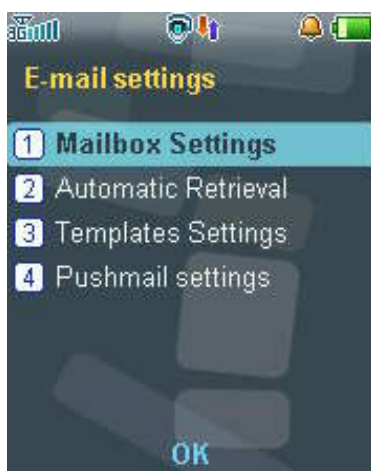

6. Press **Options**.



7. Scroll to **Add** and press **OK**.



8. Scroll to **Mailbox** name and enter mailbox name.



9. Scroll to **Username** and enter the user name.



10. Scroll to **Password** and enter the password.



11. Scroll to **My E-mail address** and enter the email address.



12. Scroll to **Display name** and enter the email display name.



13. Scroll to **Outgoing server** and enter the outgoing server address.




14. Scroll to **Outgoing port** and enter the outgoing port.



15. Scroll to **SSL Type** and select the desired SSL type.



16. Scroll to **Sending options** and select the desired settings.

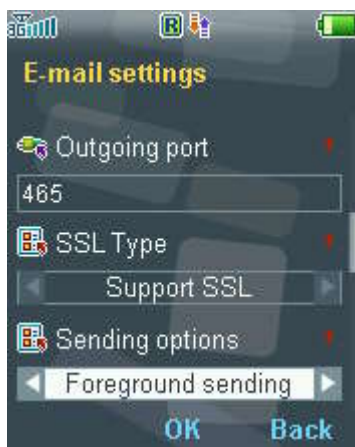

17. Scroll to **SMTP Authentication** and select the desired settings.



18. Scroll to **Automatic signature** and select the desired settings.



19. Scroll to **Mail type** and select the desired settings.



20. Scroll to **Incoming server** and enter the incoming server settings.




21. Scroll to **Incoming port** and enter the incoming port.



22. Scroll to **Mail to retrieve:** and select the desired settings.



23. Scroll to **Save to server** and select the desired settings.

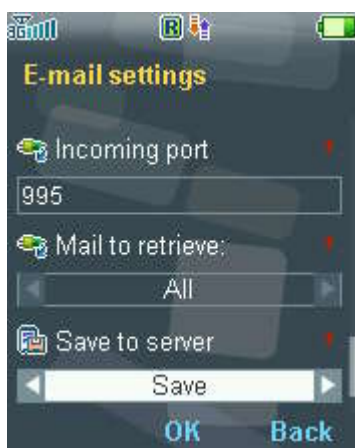

24. Scroll to **APN** to select the desired APN settings and press **OK**.



25. Press **OK** once more.



26. Press the **End call** twice key to return to the home screen.



The handset is now set up for E-mail.